




PUHZ-P200YHA

PUHZ-P250YHA

PUHZ-P200YHA3


PUHZ-P250YHA3

Unit : mm

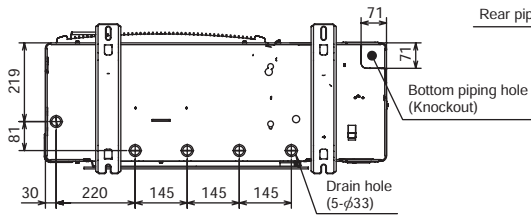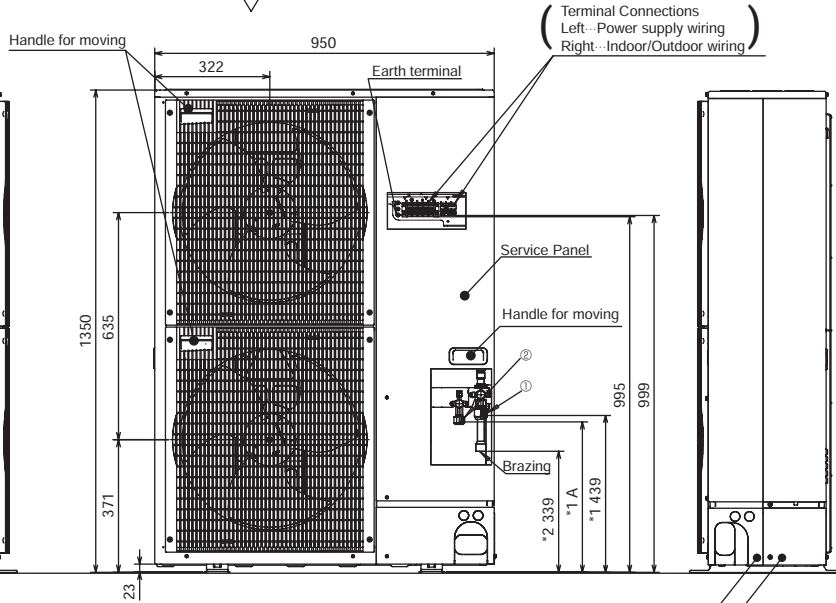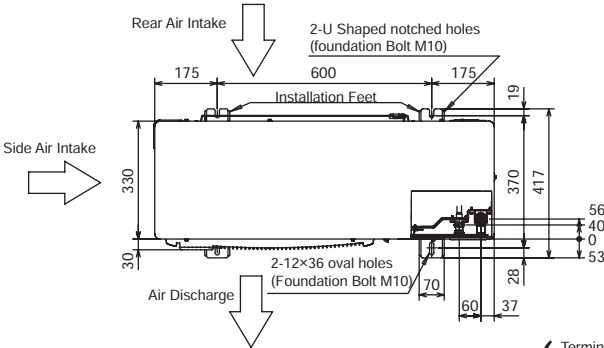


1 FREE SPACE (Around the unit)

The diagram below shows a basic example.
Explanation of particular details are given in the installation manuals etc.

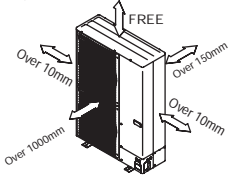


2 SERVICE SPACE

Dimensions of space needed for service access are shown in the below diagram.

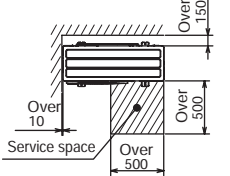

3 FOUNDATION BOLTS

Please secure the unit firmly with 4 foundation (M10) bolts. (Bolts and washers must be purchased locally.)

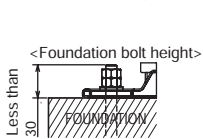

4 PIPING-WIRING DIRECTIONS

Piping and wiring connections can be made from 4 directions: front, right, rear and below.

Example of Notes

- ①... Refrigerant GAS pipe connection (FLARE)φ19.05 (3/4 inch)
- ②... Refrigerant LIQUID pipe connection (FLARE)
- *1... Indication of STOP VALVE connection location
- *2... Refrigerant GAS PIPE connection(BRAZING) O.Dφ25.4

	②	A
PUHZ-P200YHA	φ9.52	447
PUHZ-P200YHA3	(3/8 inch)	
PUHZ-P250YHA	φ12.7	421
PUHZ-P250YHA3	(1/2 inch)	

Piping Knockout Hole Details

