

400 LONGWATER AVENUE DRAINAGE / SUDS MAINTENANCE STRATEGY

Project name **400 Longwater Avenue**
 Doc no. **1620001295-RAM-XX-XX-RP-C-00001**
 Project no. **1620001295**
 Recipient **McLaughlin & Harvey**
 Document type **Report**
 Version **P01**
 Date **07/09/2020**
 Prepared by **James Wood**
 Checked by **Peter Chaplin**
 Approved by **Peter Chaplin**

CONTENTS

1.	Introduction	1
2.	SuDS Maintenance Strategy	1
2.1	Table 3.1 – Sustainable Urban Drainage System (SuDS) Maintenance Strategy	1
3.	Pump Maintenance	5

1. Introduction

This report has been produced to provide information regarding the maintenance of the sustainable urban drainage systems (SuDS) elements of the project.

2. SuDS Maintenance Strategy

The maintenance strategy for specific SuDS features proposed at the site will be dependent upon the products used within the installation of the features and therefore subject to manufacturer's guidance. However, a high-level strategy is proposed below.

The maintenance regime of SuDS features present on site can be divided into three categories: regular maintenance, occasional tasks and remedial works. The frequency of regular maintenance will usually be monthly or annually, the occasional tasks and remedial works should be conducted as required.

Table 3.1 below describes the typical maintenance and management requirements of the proposed SuDS elements to the surface water drainage strategy in line with CIRIA C753: The SuDS Manual.

2.1 Table 3.1 – Sustainable Urban Drainage System (SuDS) Maintenance Strategy

TABLE 15.1 Operation and maintenance requirements for filter strips

Maintenance schedule	Required action	Typical frequency
Regular maintenance	Remove litter and debris	Monthly (or as required)
	Cut the grass – to retain grass height within specified design range	Monthly (during growing season), or as required
	Manage other vegetation and remove nuisance plants	Monthly (at start, then as required)
	Inspect filter strip surface to identify evidence of erosion, poor vegetation growth, compaction, ponding, sedimentation and contamination (eg oils)	Monthly (at start, then half yearly)
	Check flow spreader and filter strip surface for even gradients	Monthly (at start, then half yearly)
	Inspect gravel flow spreader upstream of filter strip for clogging	Monthly (at start, then half yearly)
	Inspect silt accumulation rates and establish appropriate removal frequencies	Monthly (at start, then half yearly)
Occasional maintenance	Reseed areas of poor vegetation growth; alter plant types to better suit conditions, if required	As required or if bare soil is exposed over > 10% of the filter strip area.
Remedial actions	Repair erosion or other damage by re-turfing or reseeded	As required
	Relevel uneven surfaces and reinstate design levels	As required
	Scarify and spike topsoil layer to improve infiltration performance, break up silt deposits and prevent compaction of the soil surface	As required
	Remove build-up of sediment on upstream gravel trench, flow spreader or at top of filter strip	As required
	Remove and dispose of oils or petrol residues using safe standard practices	As required

TABLE 17.1 Operation and maintenance requirements for swales

Maintenance schedule	Required action	Typical frequency
Regular maintenance	Remove litter and debris	Monthly, or as required
	Cut grass – to retain grass height within specified design range	Monthly (during growing season), or as required
	Manage other vegetation and remove nuisance plants	Monthly at start, then as required
	Inspect inlets, outlets and overflows for blockages, and clear if required	Monthly
	Inspect infiltration surfaces for ponding, compaction, silt accumulation, record areas where water is ponding for > 48 hours	Monthly, or when required
	Inspect vegetation coverage	Monthly for 6 months, quarterly for 2 years, then half yearly
	Inspect inlets and facility surface for silt accumulation, establish appropriate silt removal frequencies	Half yearly
Occasional maintenance	Reseed areas of poor vegetation growth, alter plant types to better suit conditions, if required	As required or if bare soil is exposed over 10% or more of the swale treatment area
Remedial actions	Repair erosion or other damage by re-turfing or reseed	As required
	Relevel uneven surfaces and reinstate design levels	As required
	Scarify and spike topsoil layer to improve infiltration performance, break up silt deposits and prevent compaction of the soil surface	As required
	Remove build-up of sediment on upstream gravel trench, flow spreader or at top of filter strip	As required
	Remove and dispose of oils or petrol residues using safe standard practices	As required

TABLE 20.15 Operation and maintenance requirements for pervious pavements

Maintenance schedule	Required action	Typical frequency
Regular maintenance	Brushing and vacuuming (standard cosmetic sweep over whole surface)	Once a year, after autumn leaf fall, or reduced frequency as required, based on site-specific observations of clogging or manufacturer's recommendations – pay particular attention to areas where water runs onto pervious surface from adjacent impermeable areas as this area is most likely to collect the most sediment
Occasional maintenance	Stabilise and mow contributing and adjacent areas	As required
	Removal of weeds or management using glyphosate applied directly into the weeds by an applicator rather than spraying	As required – once per year on less frequently used pavements
Remedial Actions	Remediate any landscaping which, through vegetation maintenance or soil slip, has been raised to within 50 mm of the level of the paving	As required
	Remedial work to any depressions, rutting and cracked or broken blocks considered detrimental to the structural performance or a hazard to users, and replace lost jointing material	As required
	Rehabilitation of surface and upper substructure by remedial sweeping	Every 10 to 15 years or as required (if infiltration performance is reduced due to significant clogging)
Monitoring	Initial inspection	Monthly for three months after installation
	Inspect for evidence of poor operation and/or weed growth – if required, take remedial action	Three-monthly, 48 h after large storms in first six months
	Inspect silt accumulation rates and establish appropriate brushing frequencies	Annually
	Monitor inspection chambers	Annually

TABLE 21.3 Operation and maintenance requirements for attenuation storage tanks

Maintenance schedule	Required action	Typical frequency
Regular maintenance	Inspect and identify any areas that are not operating correctly. If required, take remedial action	Monthly for 3 months, then annually
	Remove debris from the catchment surface (where it may cause risks to performance)	Monthly
	For systems where rainfall infiltrates into the tank from above, check surface of filter for blockage by sediment, algae or other matter; remove and replace surface infiltration medium as necessary.	Annually
	Remove sediment from pre-treatment structures and/or internal forebays	Annually, or as required
Remedial actions	Repair/rehabilitate inlets, outlet, overflows and vents	As required
Monitoring	Inspect/check all inlets, outlets, vents and overflows to ensure that they are in good condition and operating as designed	Annually
	Survey inside of tank for sediment build-up and remove if necessary	Every 5 years or as required

3. Pump Maintenance

The pump will be operated and maintained in accordance with the pump manufacture's guidance and specification. The maintenance plan will be adhered to with an alarm located in the plant room of the school. Maintenance will be carried out by an appropriately trained engineer with where necessary confined space certification.