


NOTE : Can be read in conjunction with the Accredited Construction Detail for Part L-MEI-RG-02.

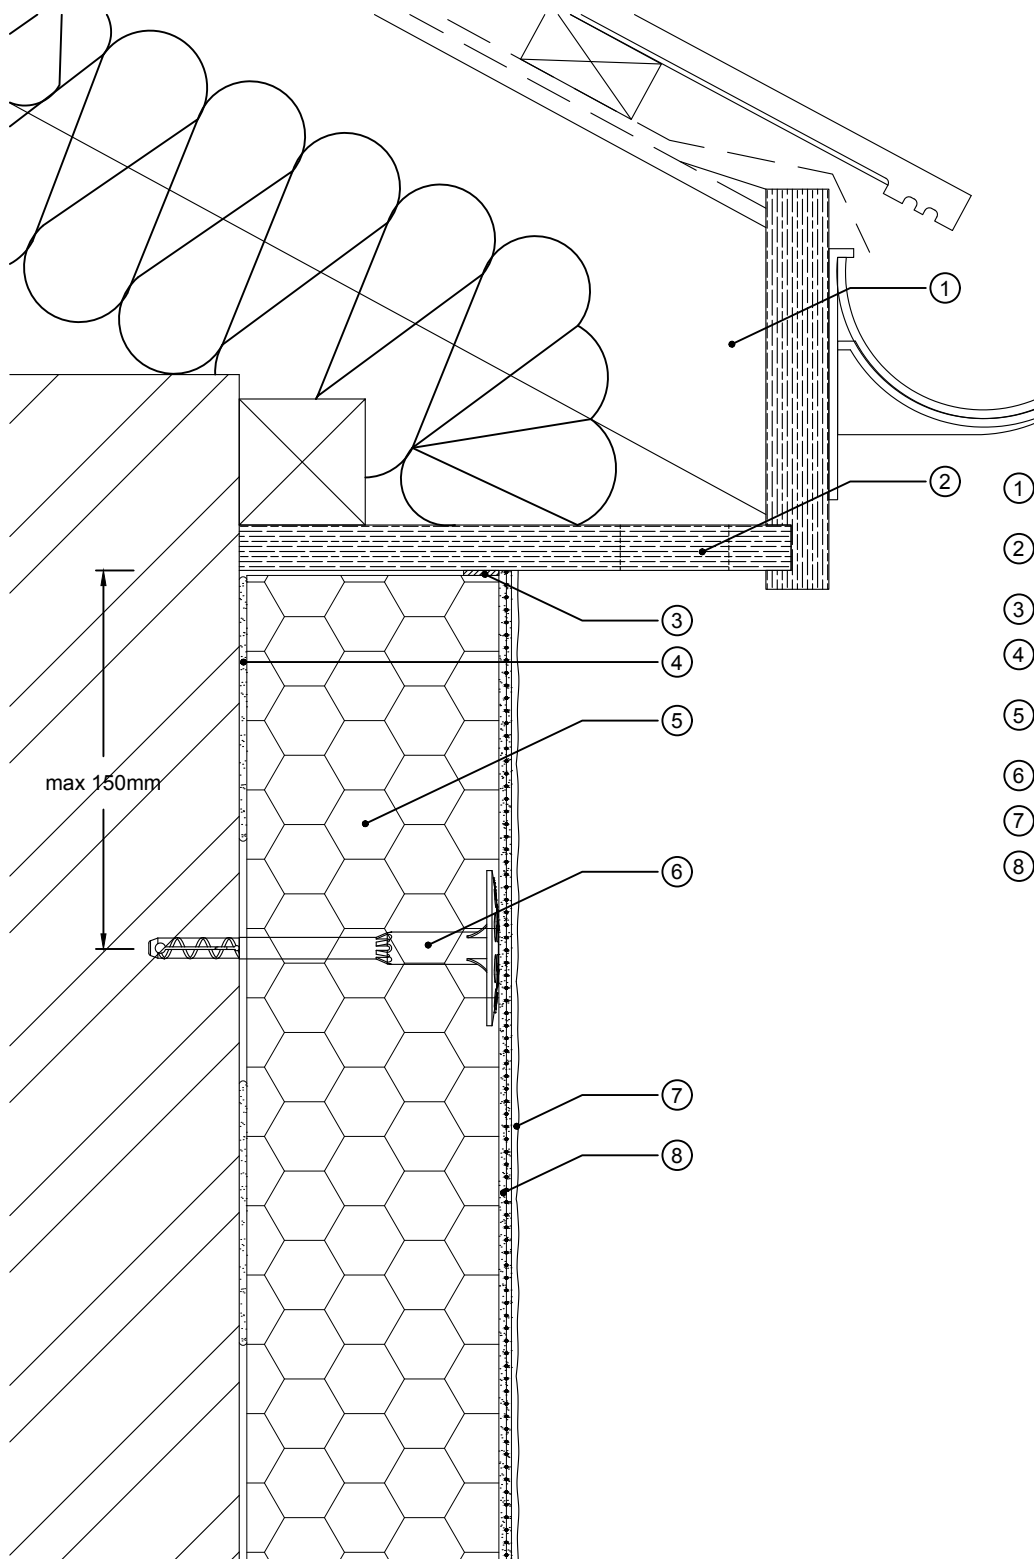

- ① Maintain ventilation above loft insulation as necessary
- ② Maintain ventilation openings in soffit board if present
- ③ PermaRock Sealing Tape
- ④ Adhesive applied up to edge of insulation board
- ⑤ PermaRock Insulation (type and thickness to specification) on PermaRock Adhesive
- ⑥ PermaRock Insulation Fixing
- ⑦ PermaRock Decorative Finish
- ⑧ PermaRock Bedding Mortar incorporating PermaRock Reinforcing Mesh

PERMAROCK

PermaRock Products Ltd.
Jubilee Drive
Loughborough
Leicestershire
LE11 5TW
Tel: (01509) 262924
Fax: (01509) 230063

Email: permarock@permarock.com
Web: www.permarock.com

Client : -

Project : Standard Detail - EWI on Brick or Blockwork Masonry

Notes :

Title : Overhanging Eaves - Ventilated Soffit Board (1)

Project Ref : -

1	06/11/2018	Title changed	TTY	JFR
Rev	Date	Amendments	By	Approved

Drawn By : TYY

Approved By : JFR

Scale : NTS

Date : 12/01/2016

Original Size : A4

Rev. 1

Drawing No :
RFS002A

Where applicable all dimensions and details should be read in conjunction with specialist consultants drawings and the project specification.
All dimensions should be checked on site by the contractor and any discrepancies should be brought to the attention of PermaRock Products Ltd.
This drawing is the copyright of PermaRock Products Ltd. It shall not be copied to any other third party without the express written consent of PermaRock Products Ltd.