


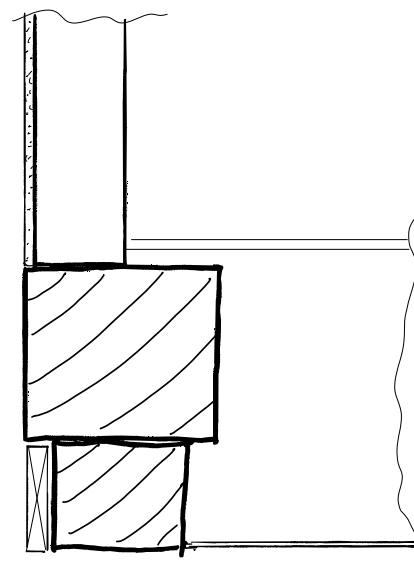


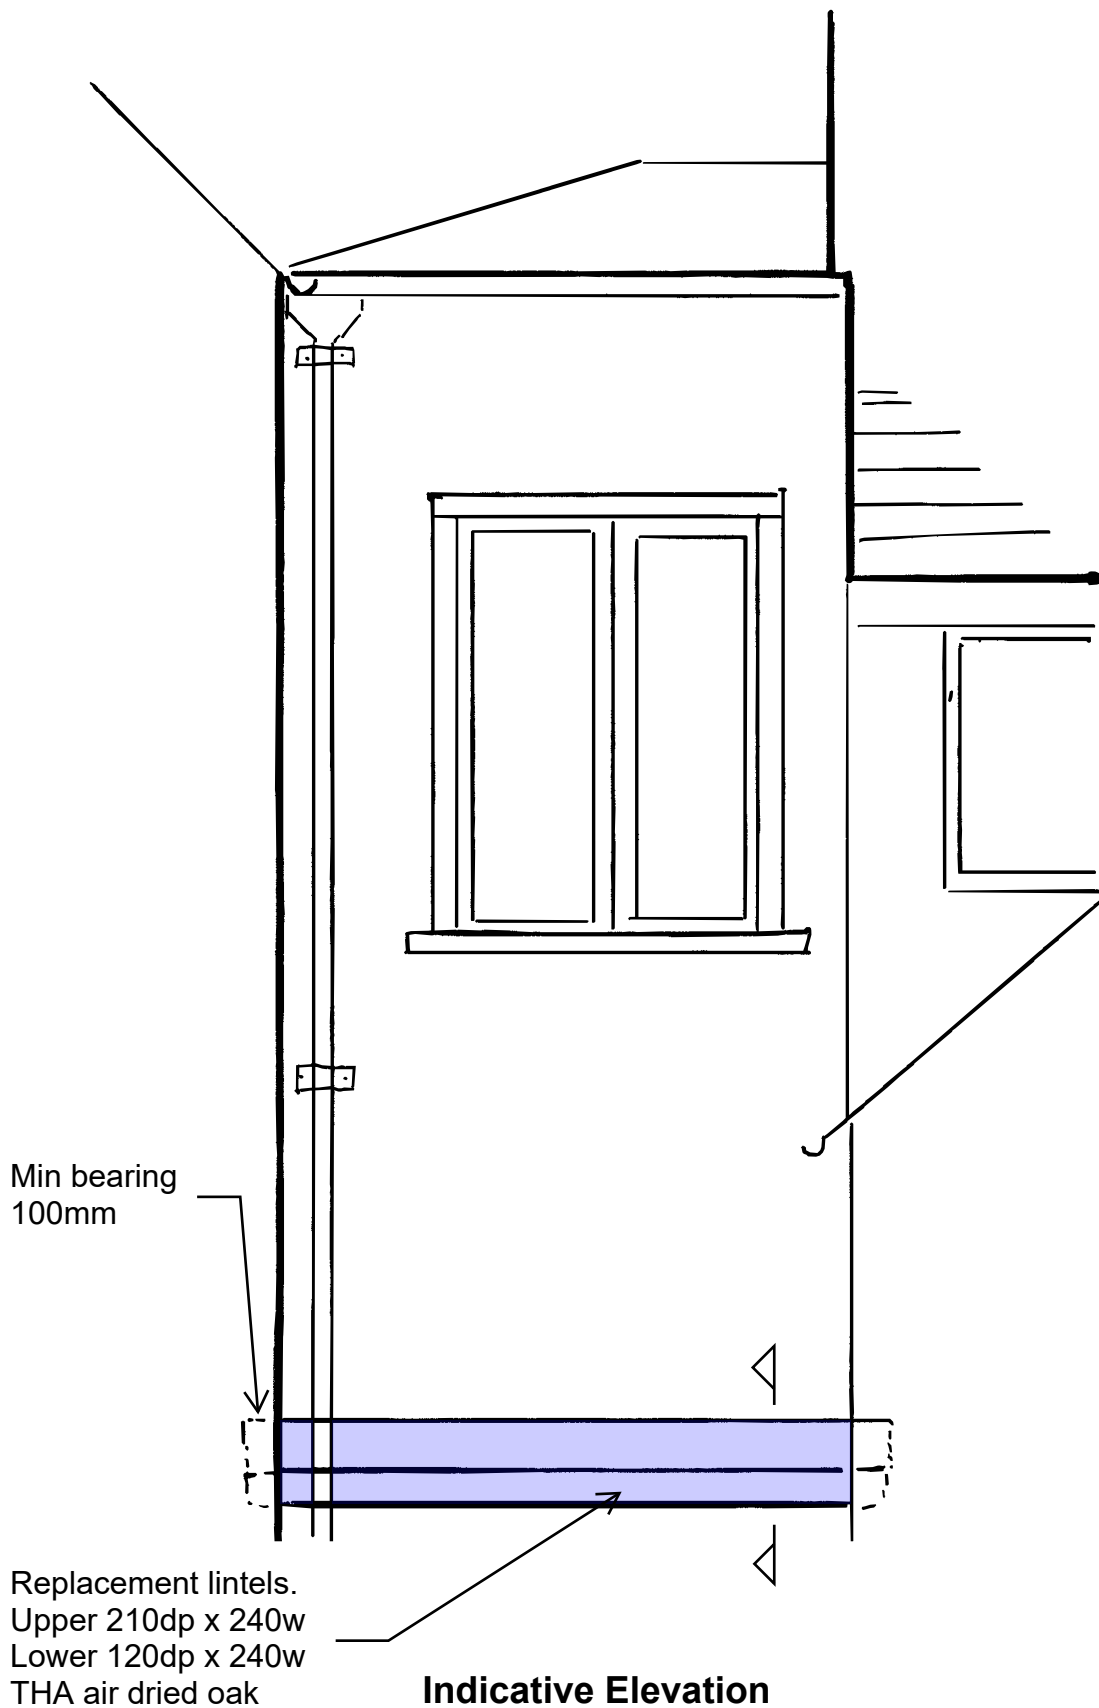


Existing Section
Existing timber in very poor condition

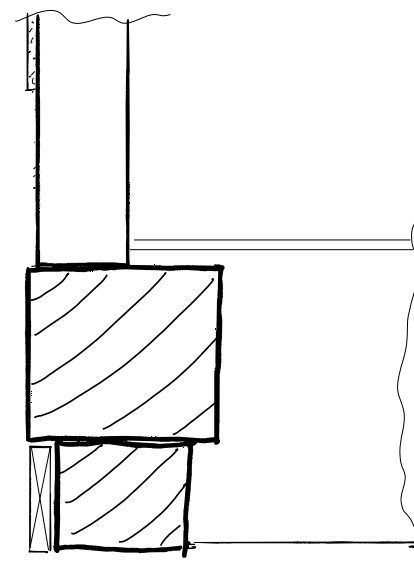


Stage 1
Carefully cut away modern render above lintel and remove soffit finish.

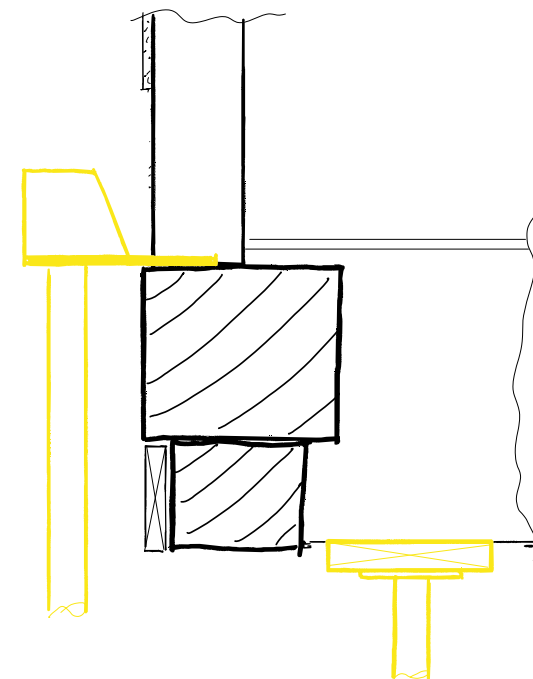


Existing Section
Prop wall above and floor behind.

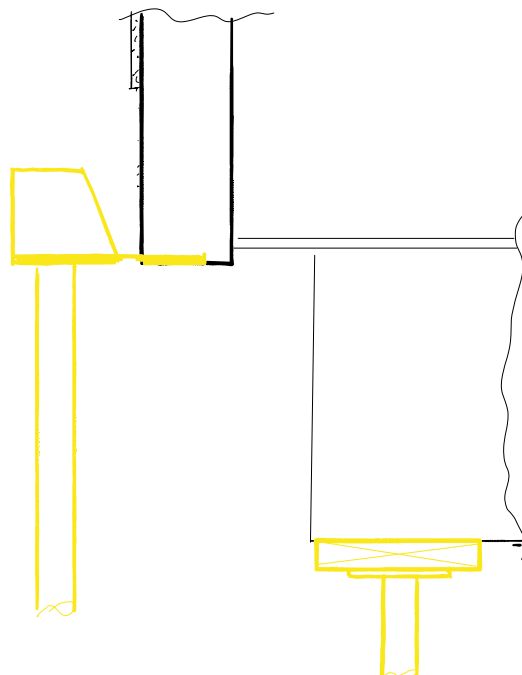

Existing Section
Remove decayed timber. Ensure all timber removed from bearings.

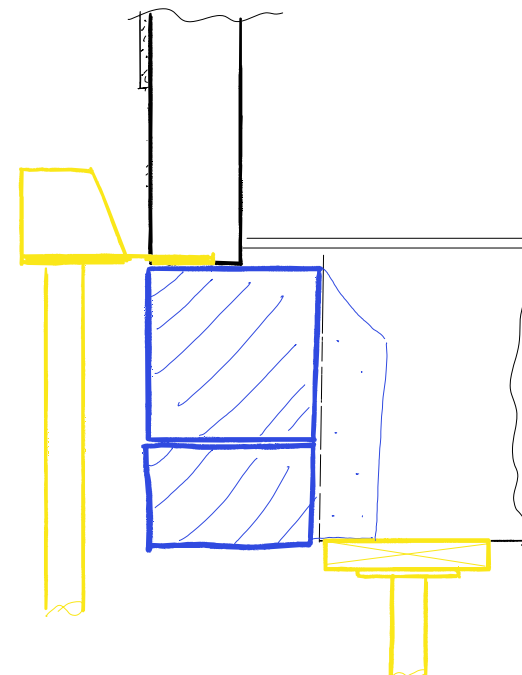

Existing Section
Install new sections and re-attach floor structure. Use hard wood wedges/dry pack as appropriate to ensure full load transfer.

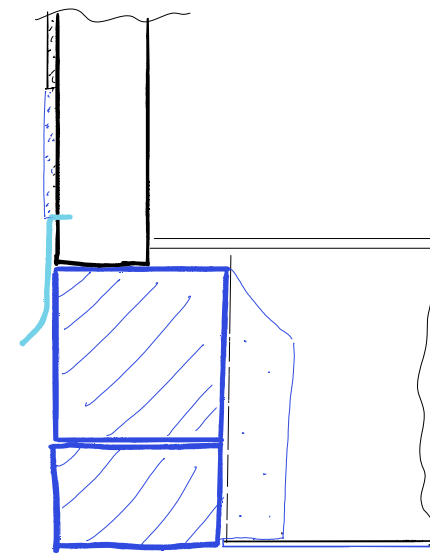

Existing Section
Install lead flashing with drip to protect lintel. Make good render and soffit to match existing.